



CRYSTAL6 6mm SIDE PANEL

INSTALLATION INSTRUCTIONS

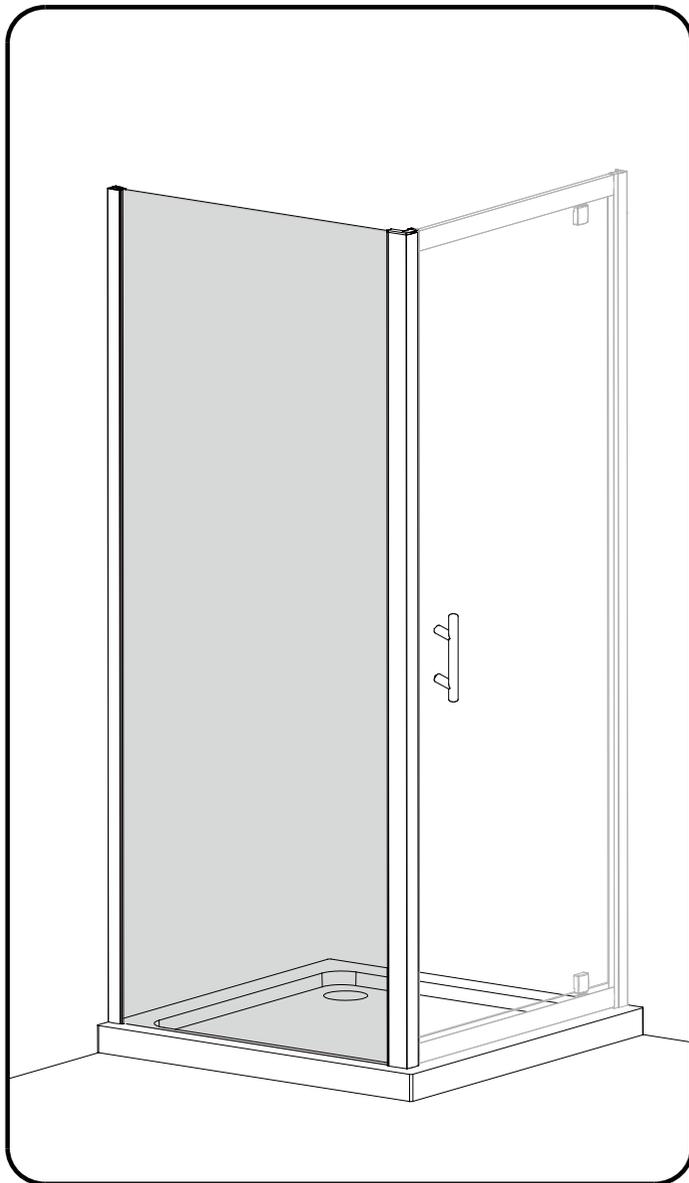




Note: Instruction shows fitting of a Side panel with a Pivot door as an example only. This Side panel can fit with the Sliding door, Bi-fold door, and Hinge door etc.


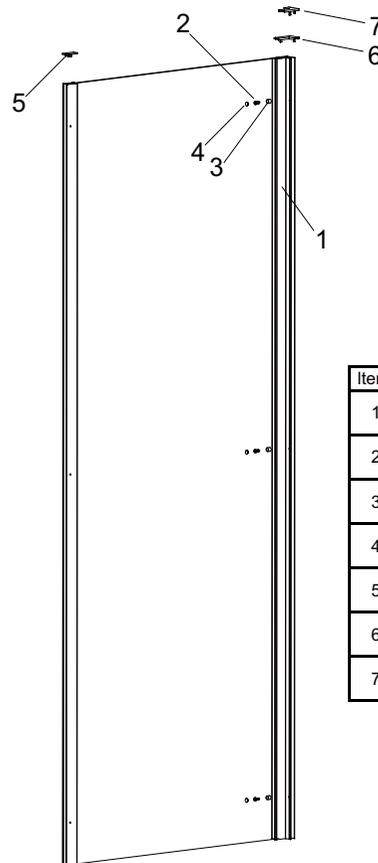


Item	Description	Image	Qty
1	Corner Post		1
2	Screw S14X10		3
3	Screw Cup A		3
4	Screw Cap		3
5	Upright Profile Cap		1
6	Corner Profile Cap-LH		1
7	Corner Profile Cap-RH		1

Tools Required (not supplied)

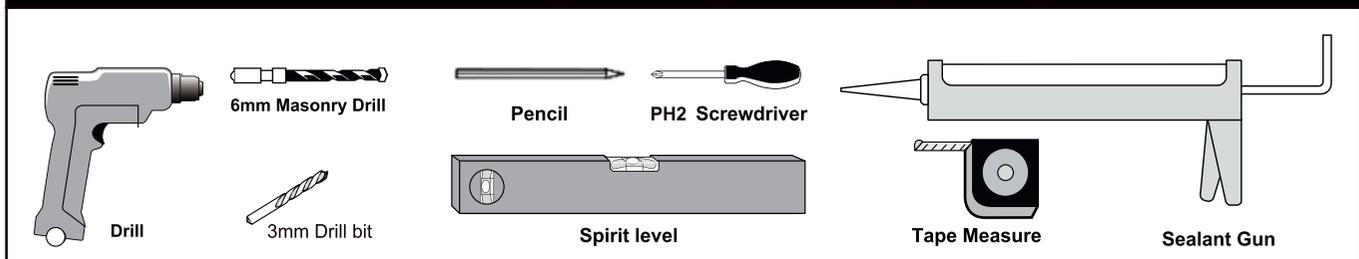

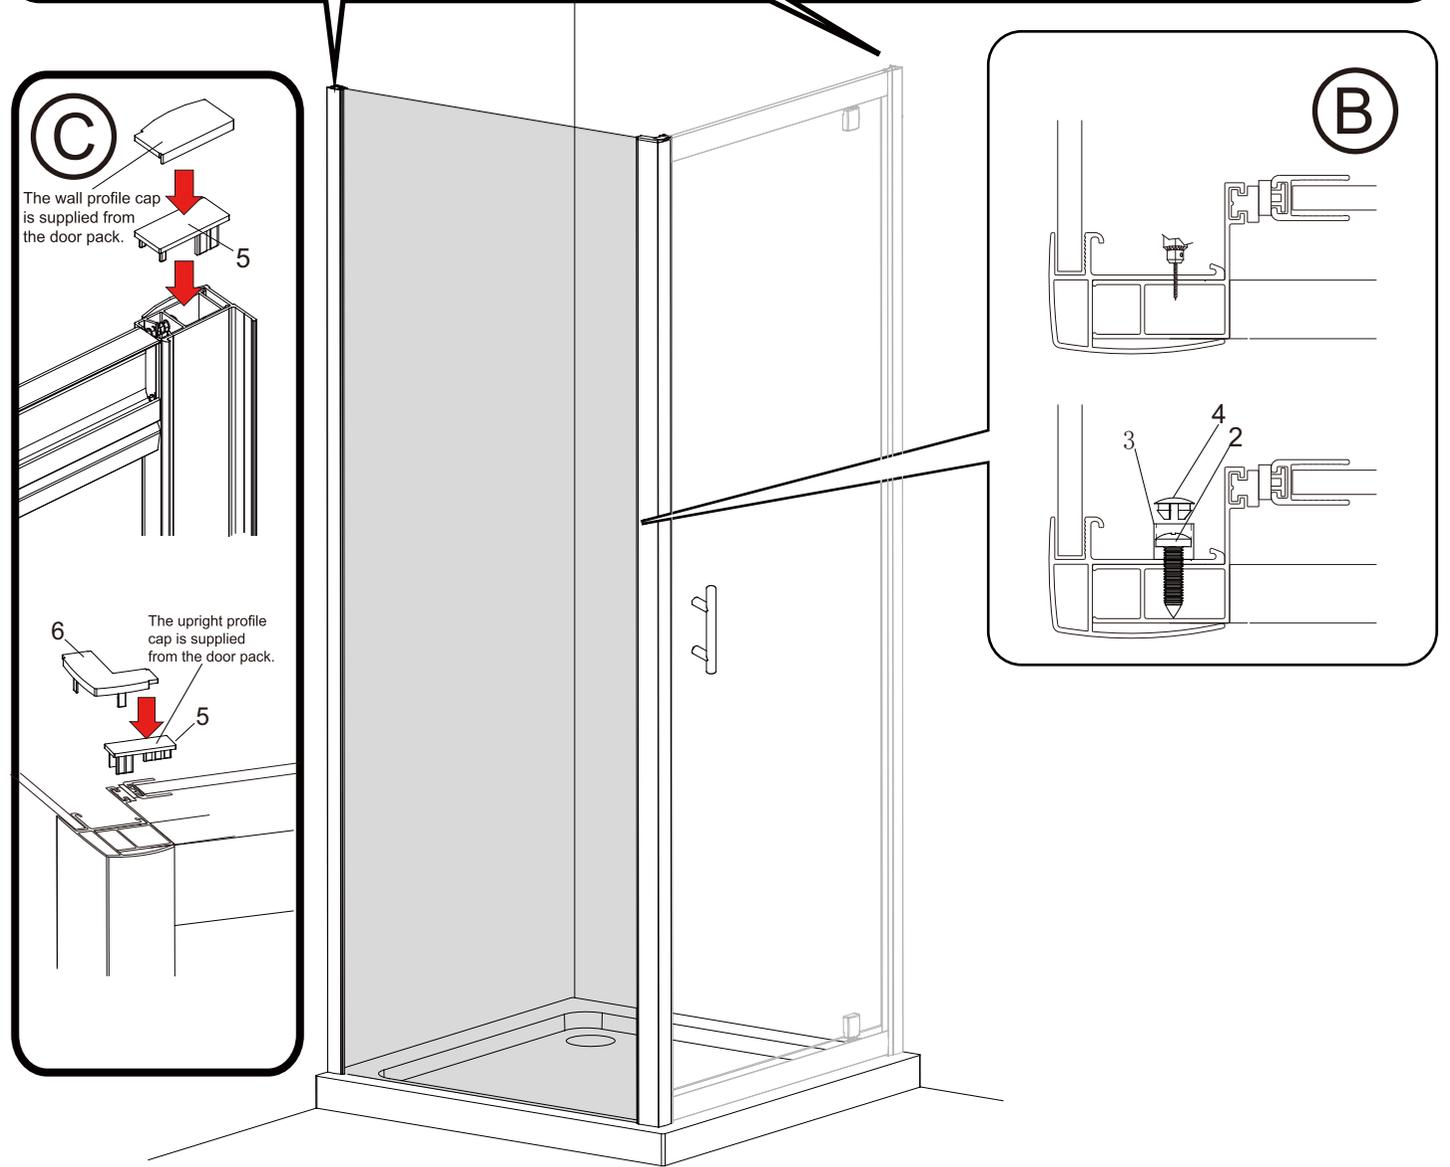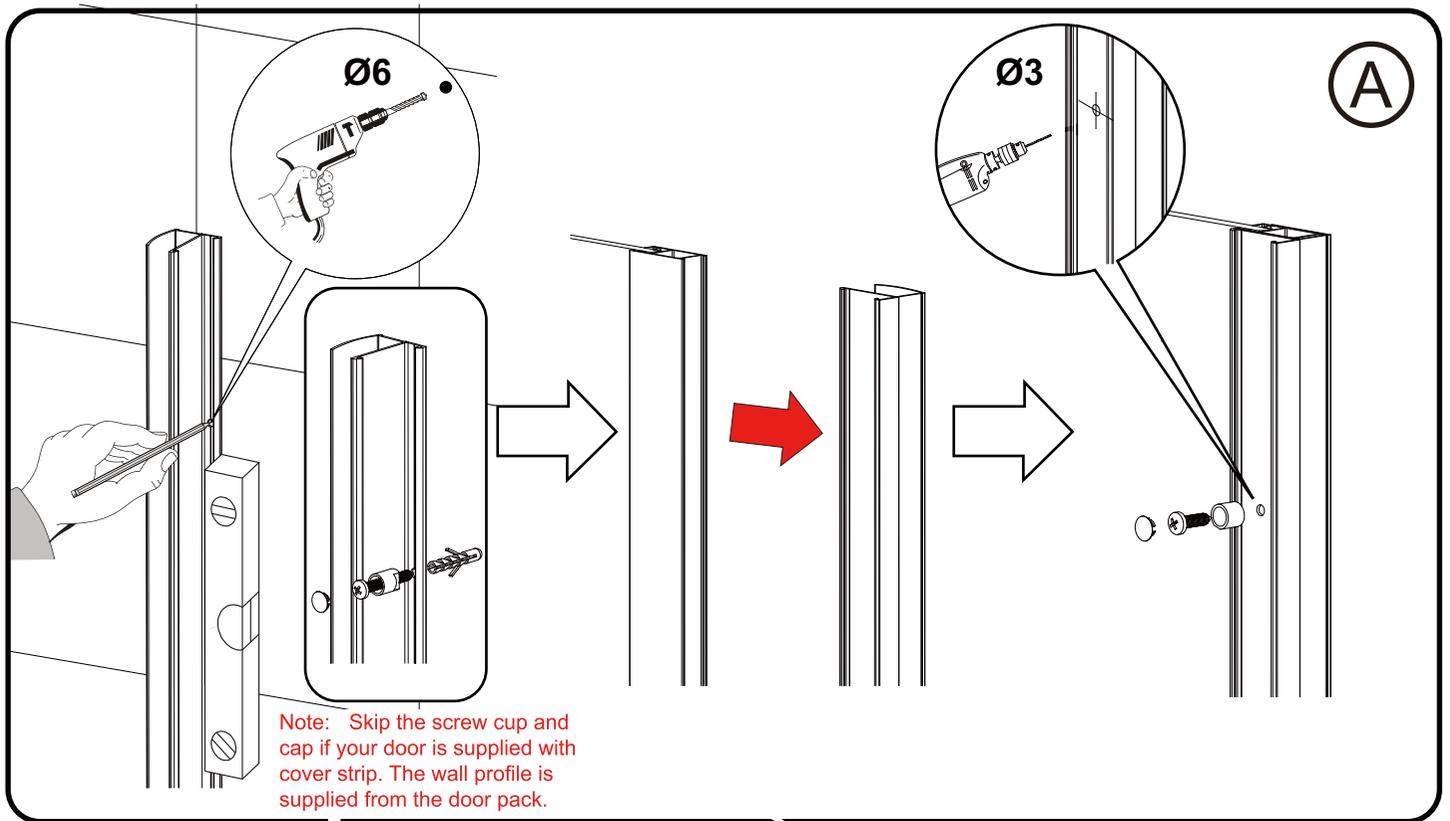

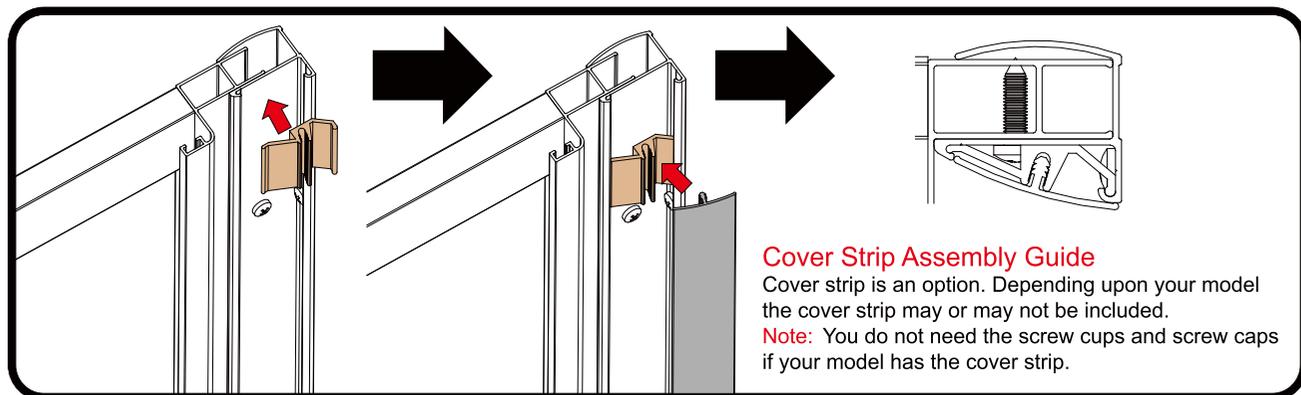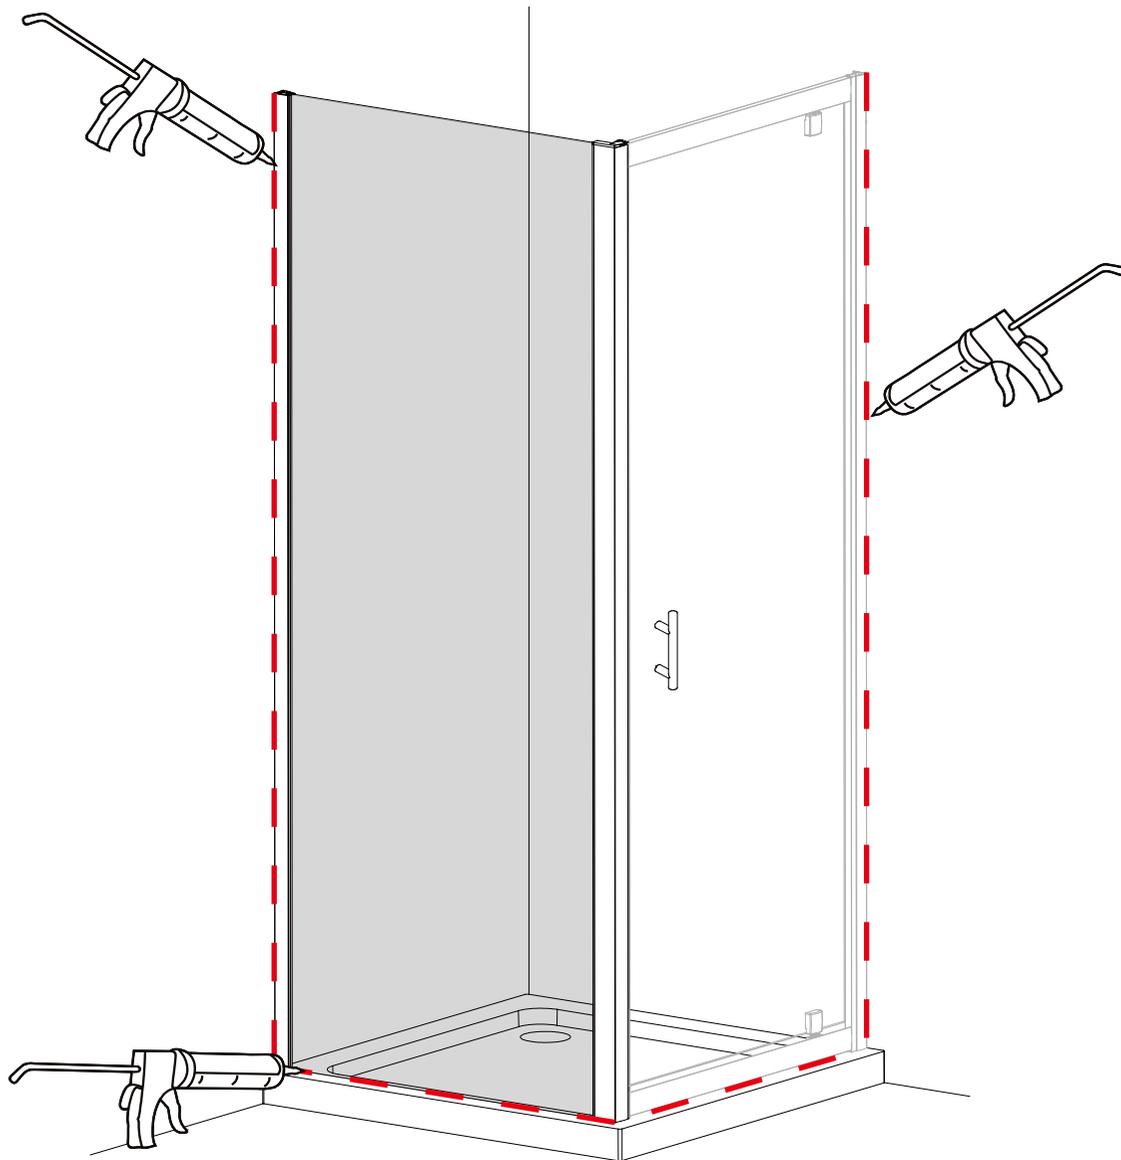

Tips - In cold weather the seal may be more difficult to fit. In this case it is advisable to warm the seal in some warm soapy water to make it more pliable.

Applying Silicone Sealant

Sealing Inside

Seal from the top of the wall profile to the bottom on the **INSIDE** between the wall profile and the wall.
IMPORTANT: Do not apply sealant on inside of tray.

Sealing Outside

Seal only along the bottom rail and glass on the **OUTSIDE** between the profile /glass and the tray. Also up between the wall profile and the wall.
 Seal also the joints between the bottom profile and any upright profiles.

