


## EMERALD8 HINGED DOOR


### INSTALLATION INSTRUCTIONS

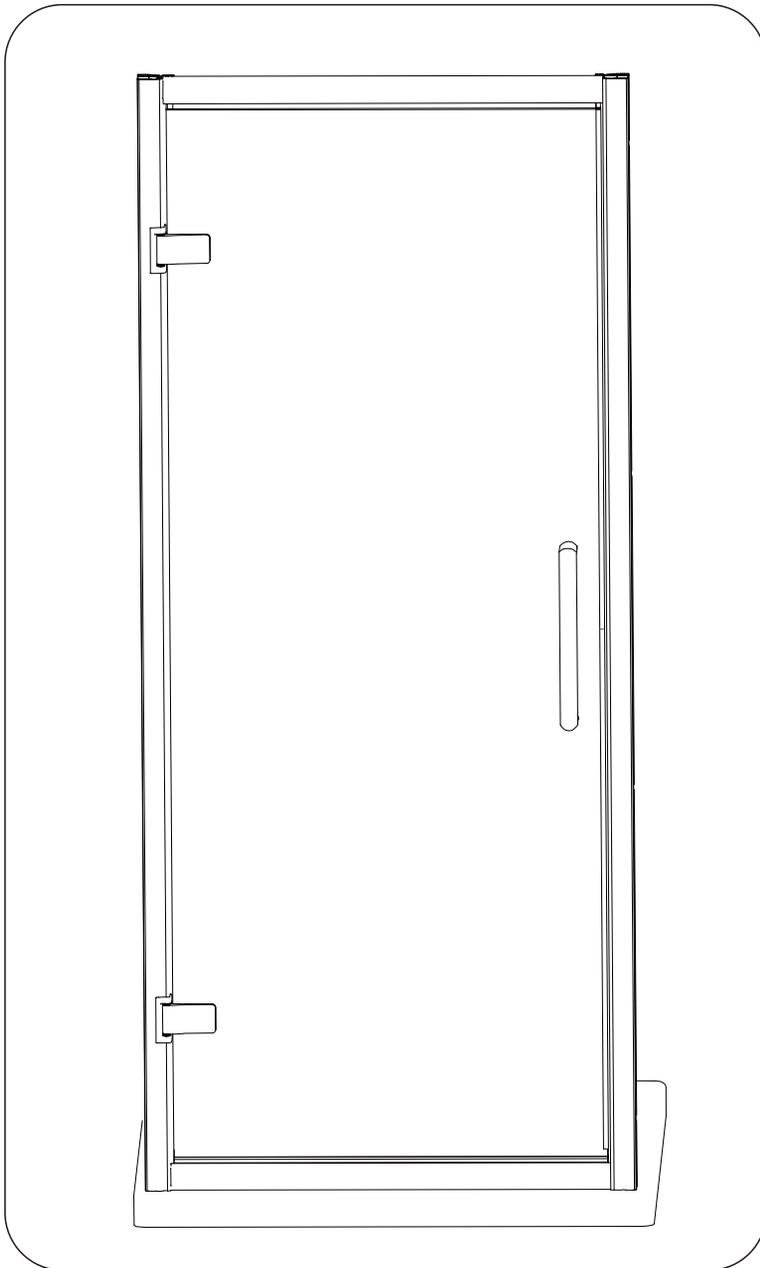


#### Tools Required



**Drill**




6mm Masonry Drill  
3.2mm HSS Drill



**Spirit level**



**Sealant Gun**



**Tape Measure**



**Pencil**



**PH2 TYPE  
Screwdriver**

Please note hand tools **NOT** supplied.


### IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls. Hollow or stud-partition walls will require alternative fixings. Please consult with a reputable trades person or hardware supplier for the correct type of fixing.


It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.

# Components And Box Contents

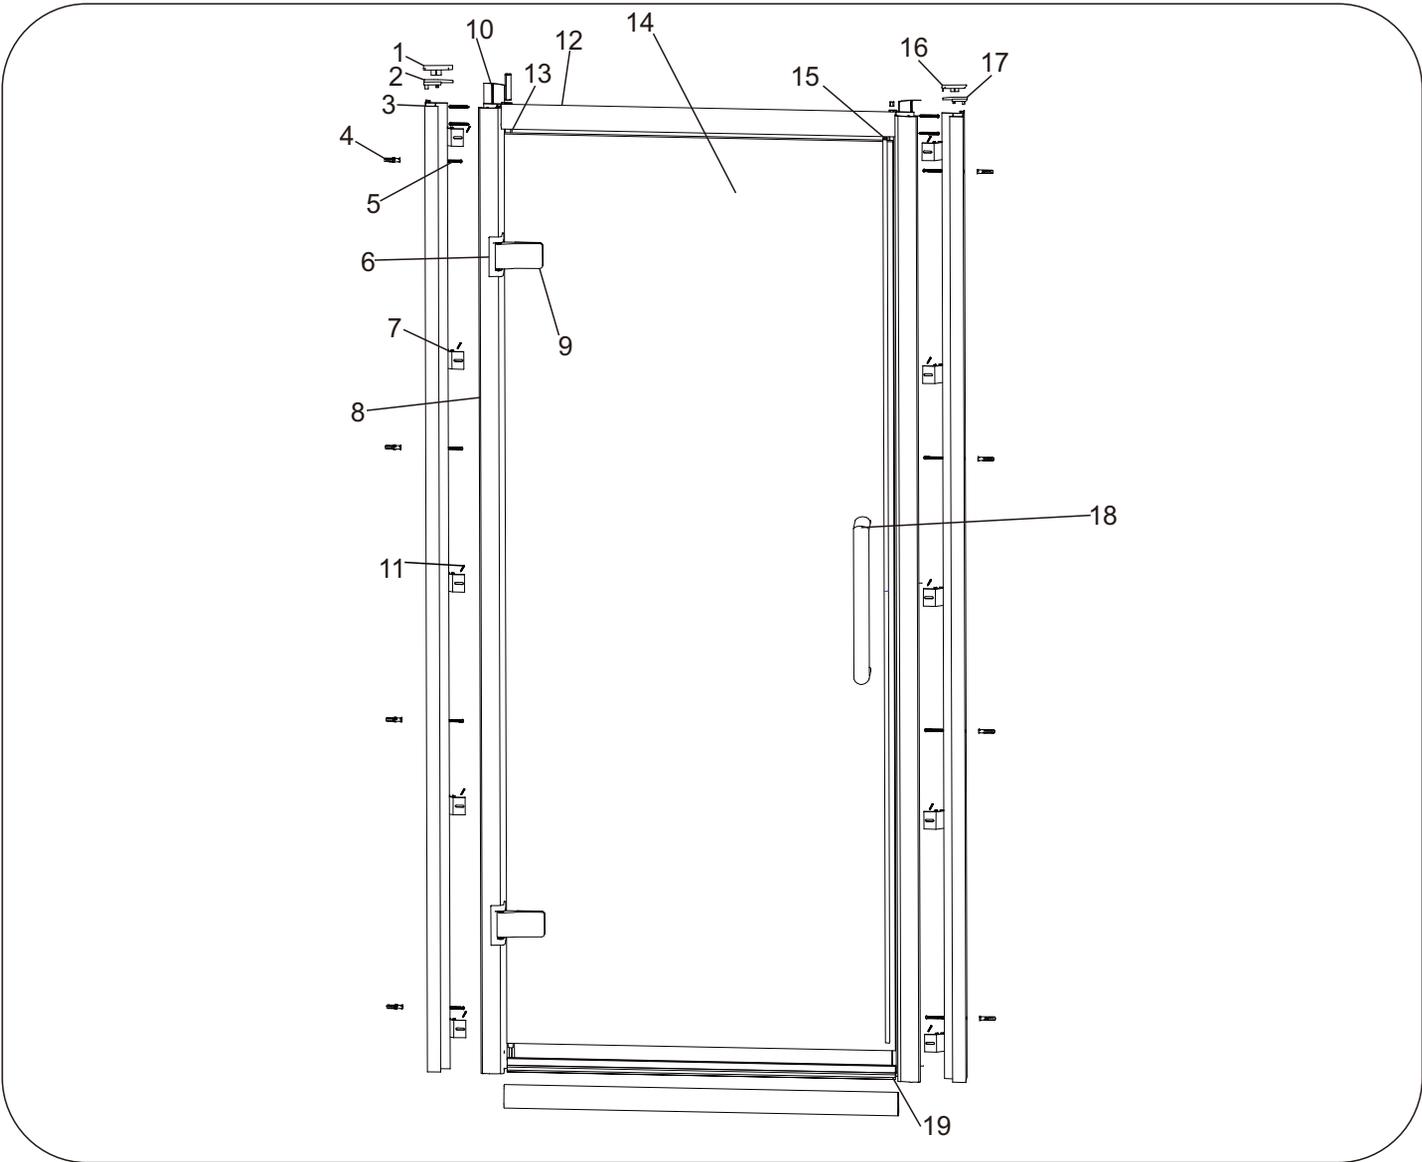


NO.	Description	Qty	NO.	Description	Qty
1	Left Cover caps A	1	11	Screw M4*10	10
2	Left Cover caps B	1	12	Rail	2
3	Wall Profile	2	13	Magnet	1
4	Wall Plug	8	14	Moving Panel	1
5	Screw M4*30	8	15	Magnet	1
6	Plastic Part	2	16	Right Cover Caps B	1
7	Plastic Parts	10	17	Right Cover Caps A	1
8	Vertical Profile A	2	18	Handle	1
9	Hinge	2	19	Bottom Seals	1
10	Cover Strips	2			

Left



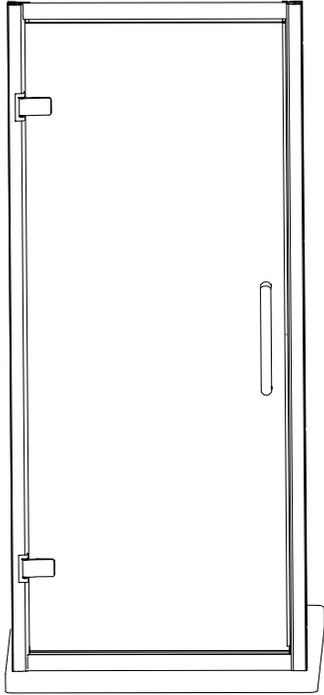


Right


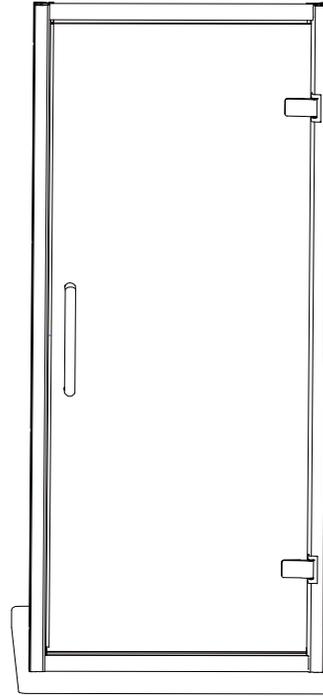


## Installation Steps




### Step1

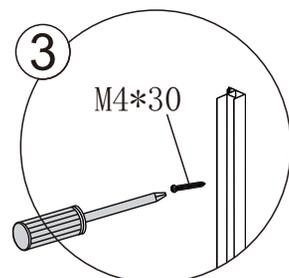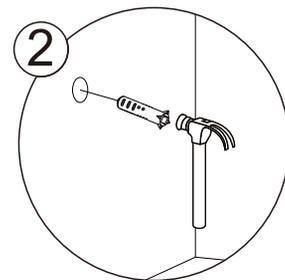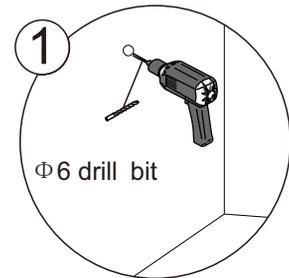




## Step2

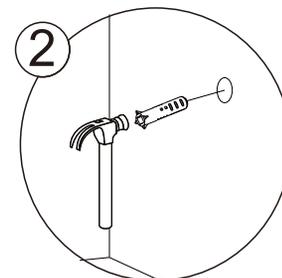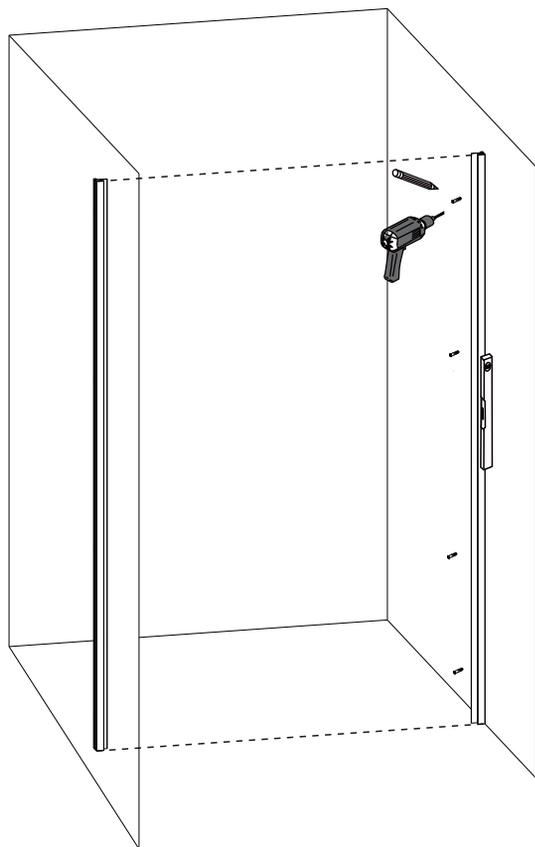



## Step3

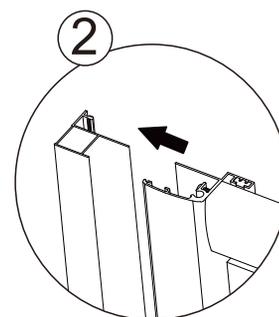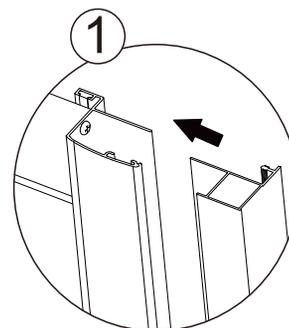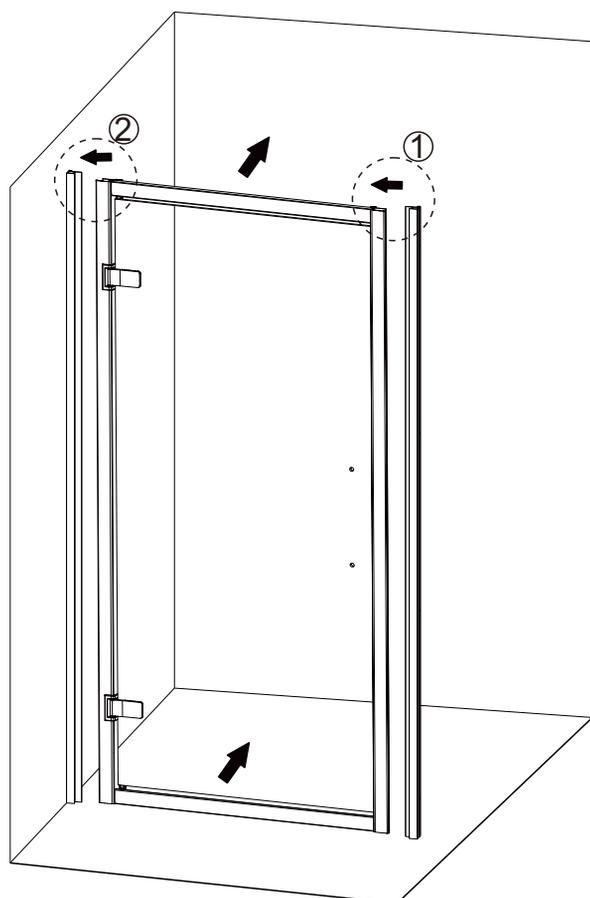




# Step4

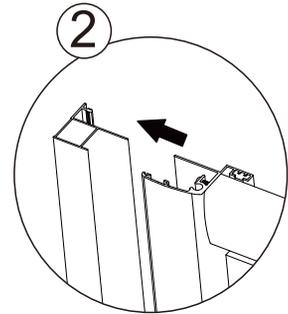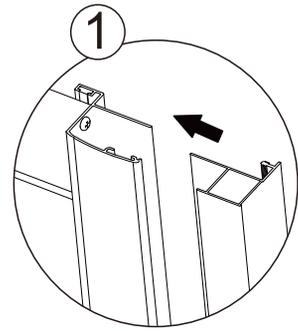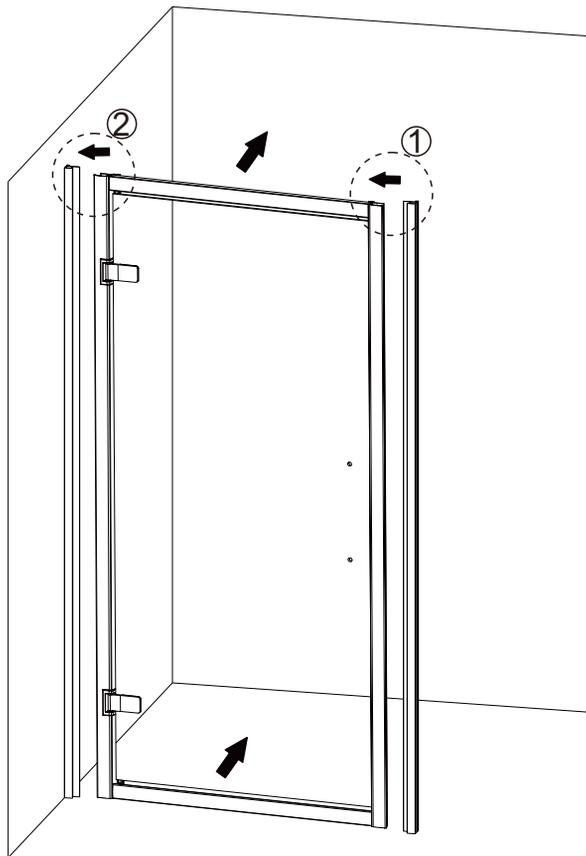





# Step5

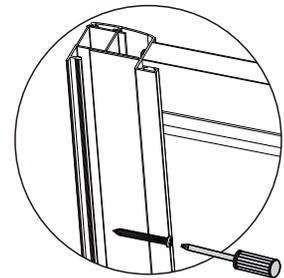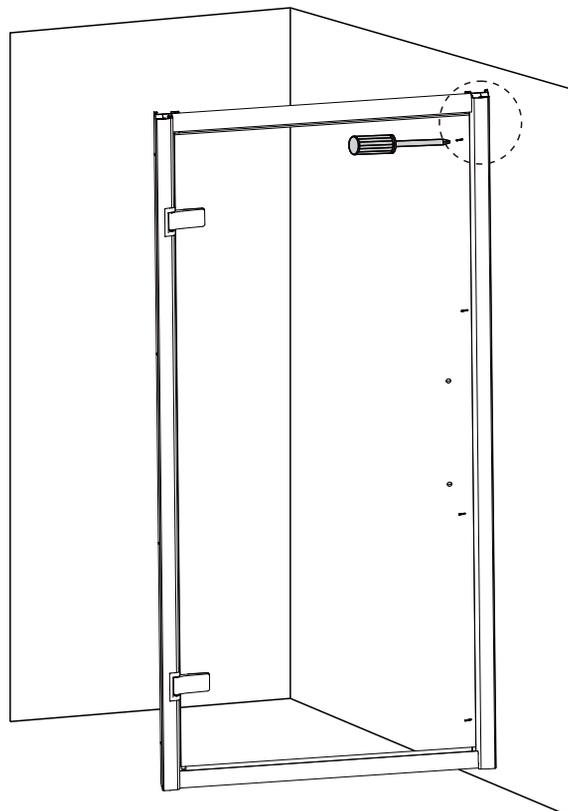




# Step6

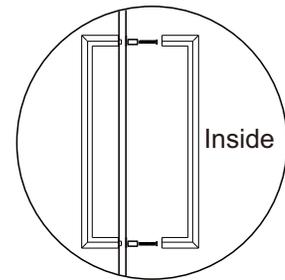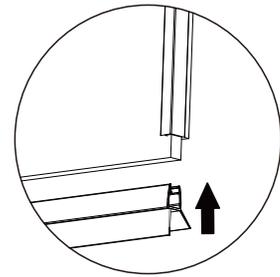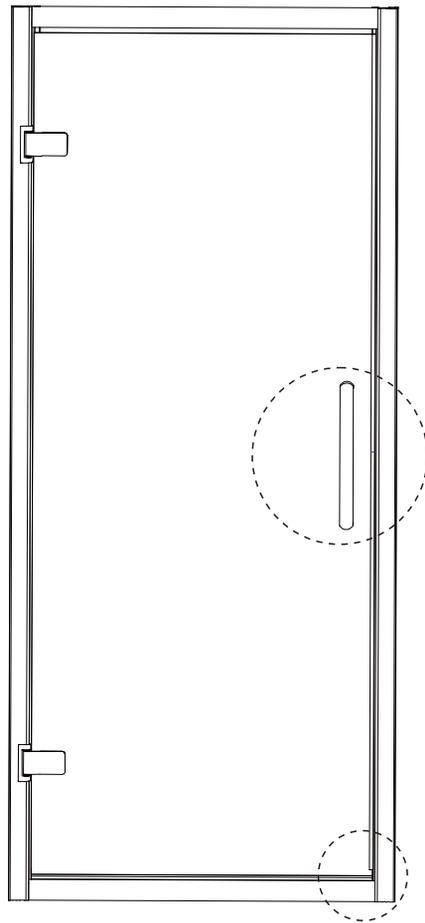





# Step7

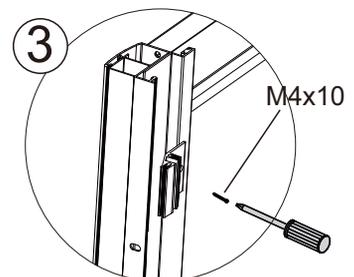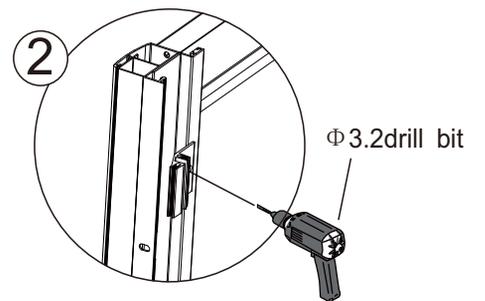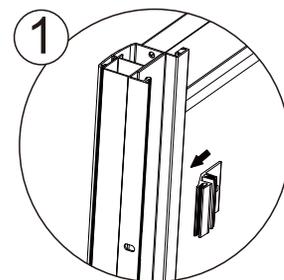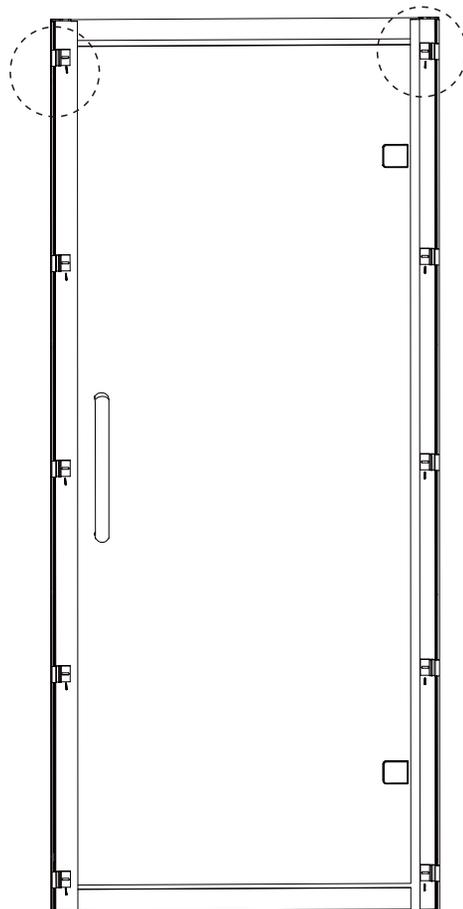



Step8

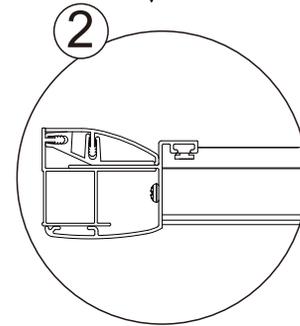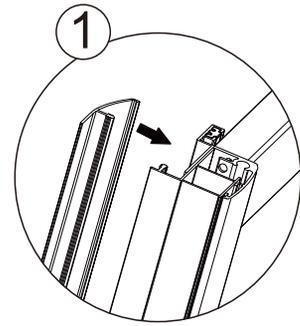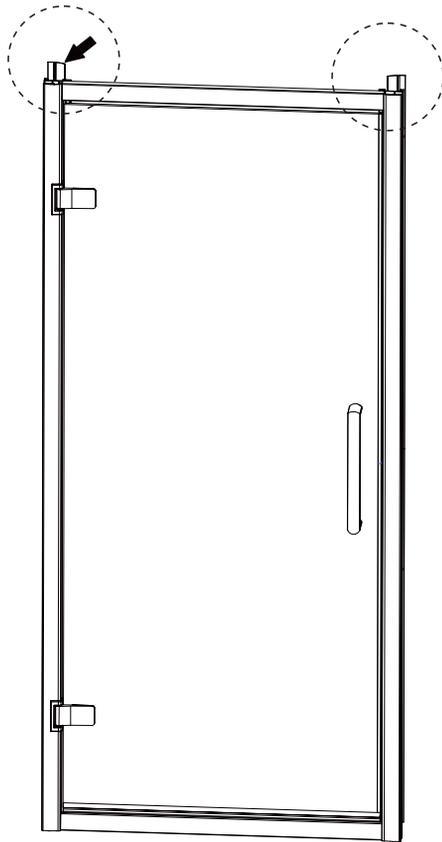

Step9

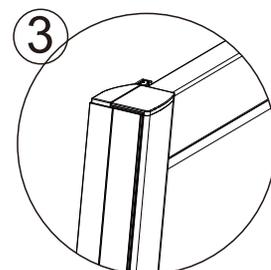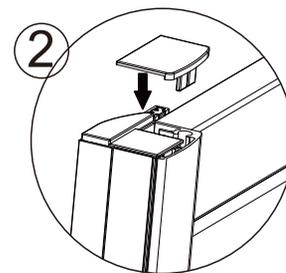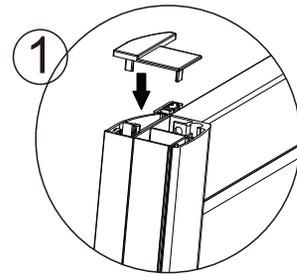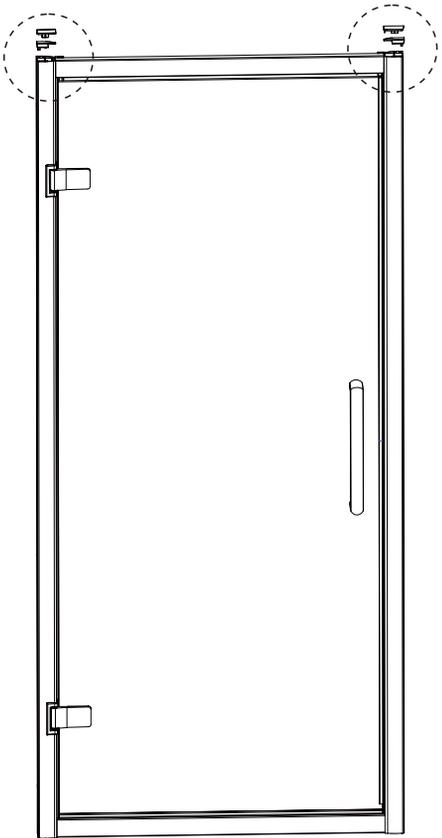


# Step10

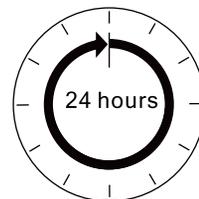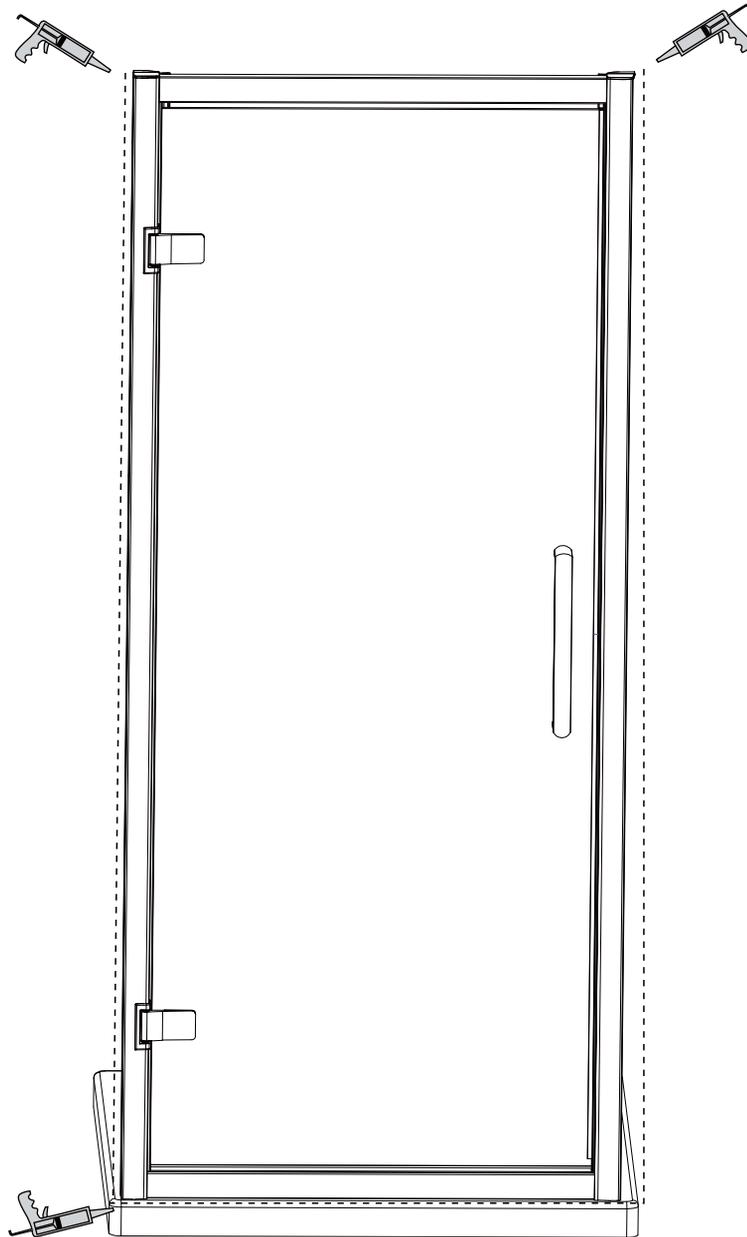

**Allow 24 hours for silicone to dry before use.**


**Silicone on the outside edge only**

# Components And Box Contents

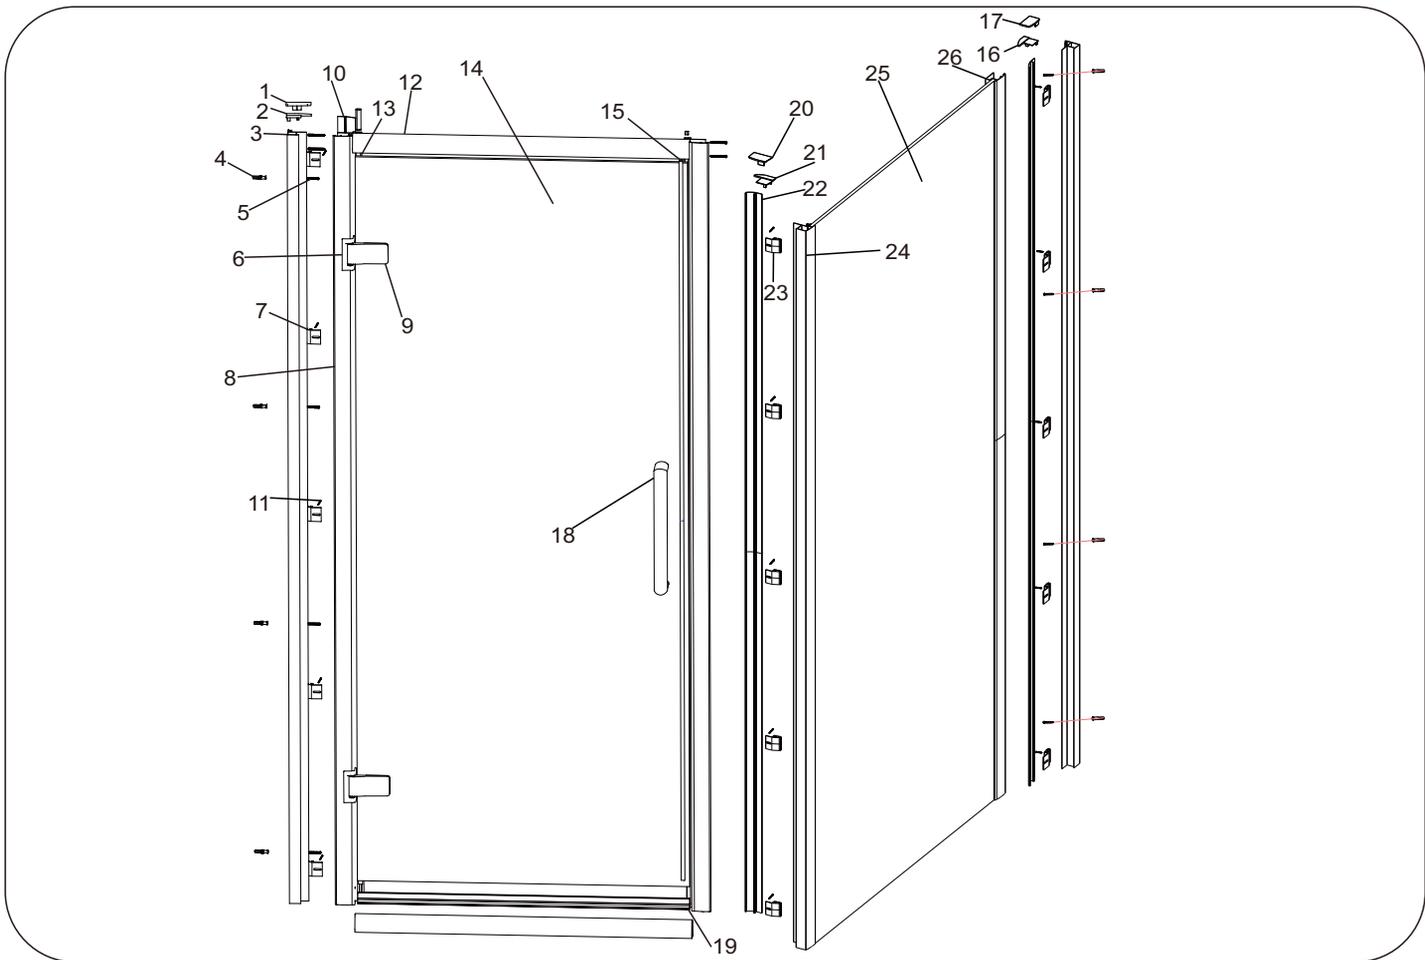


NO.	Description	Qty	NO.	Description	Qty
1	Left Cover caps A	1	14	Moving Panel	1
2	Left Cover caps B	1	15	Magnet	1
3	Wall Profile	2	16	Right Cover Caps B	1
4	Wall Plug	8	17	Right Cover Caps A	1
5	Screw M4*30	8	18	Handle	1
6	Plastic Part	2	19	Bottom Seals	1
7	Plastic Parts	10	20	Corner Cover A	1
8	Vertical Profile A	2	21	Corner Cover B	1
9	Hinge	2	22	Cover Strips B	1
10	Cover Strips	2	23	Plastic Parts B	5
11	Screw M4*10	15	24	Cover Strips B	1
12	Rail	2	25	Side Panel	1
13	Magnet	1	26	Vertical Profile C	1

Left

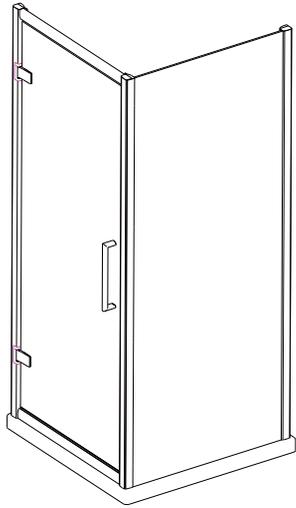


Right


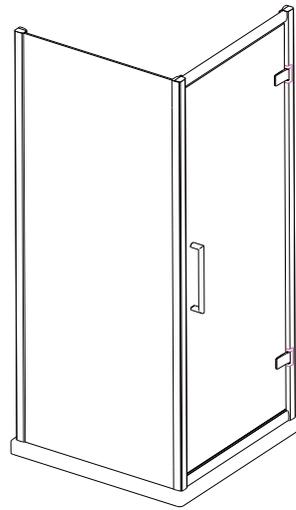


## Installation Steps





### Step1

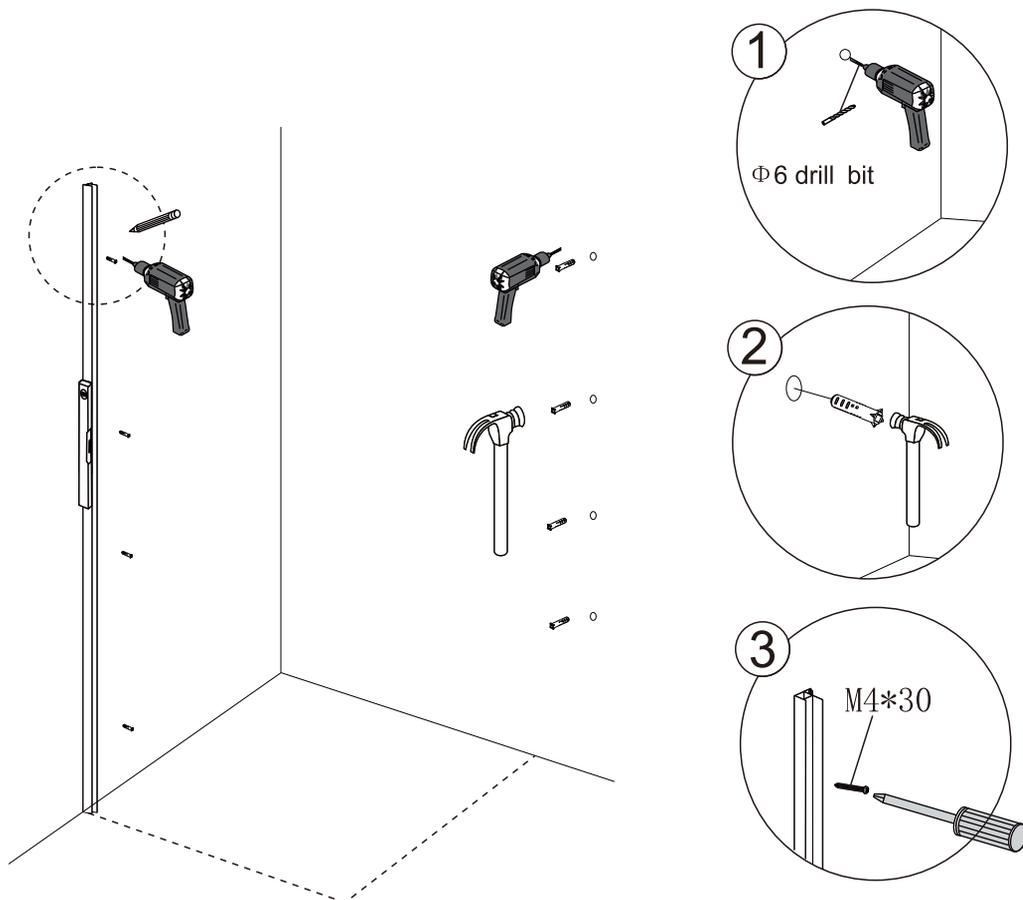



## Step2

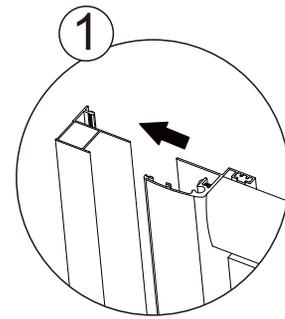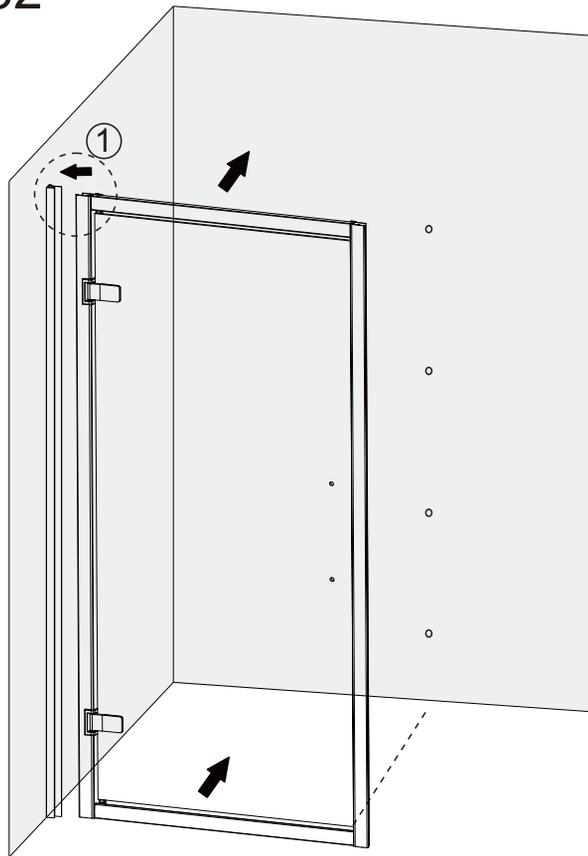








## Step3

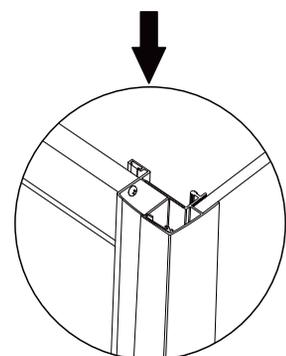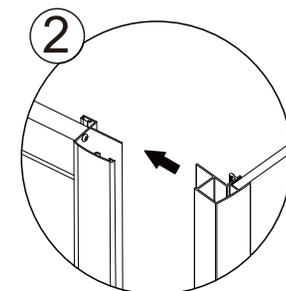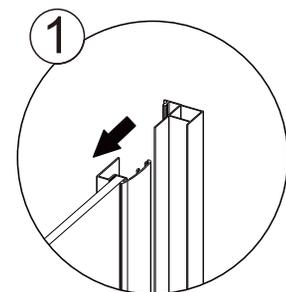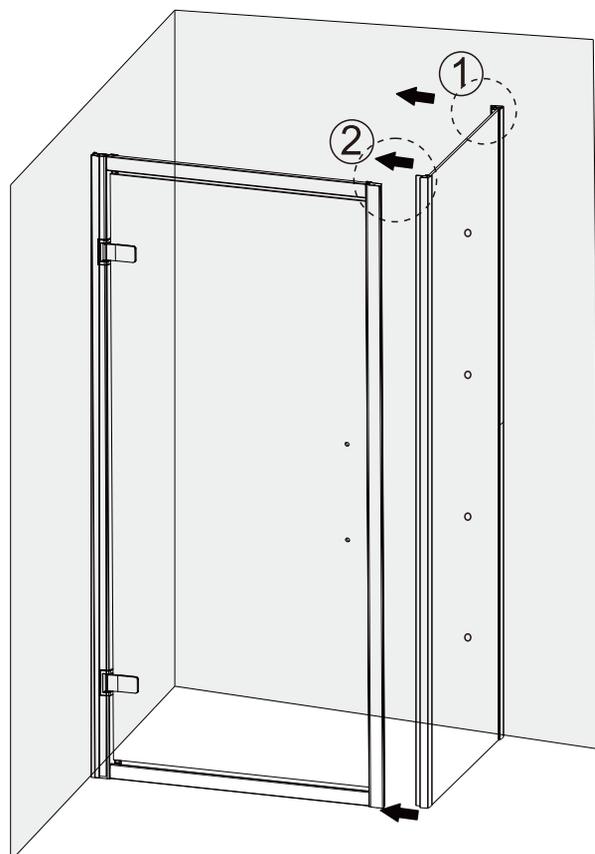




# Step4

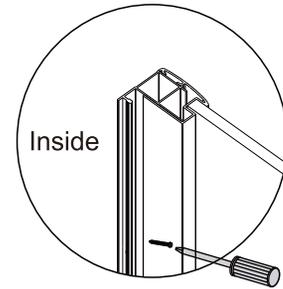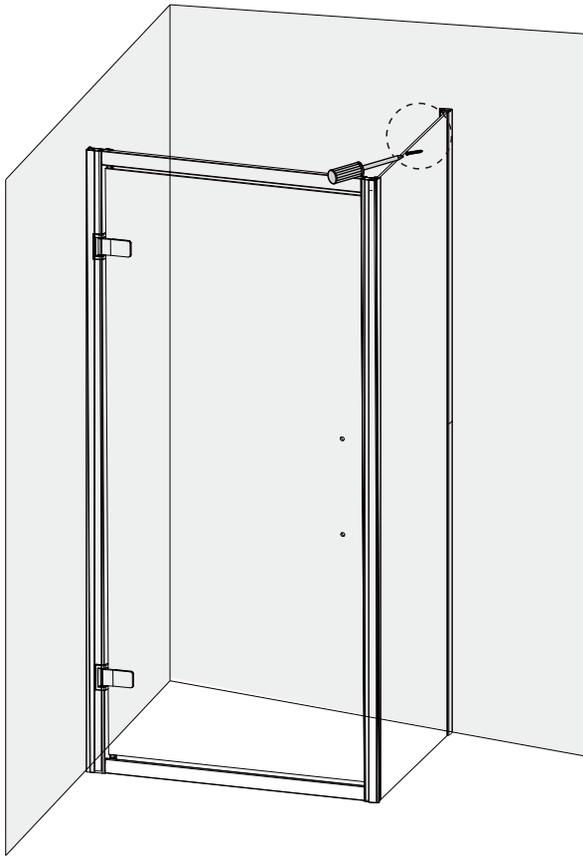





# Step5

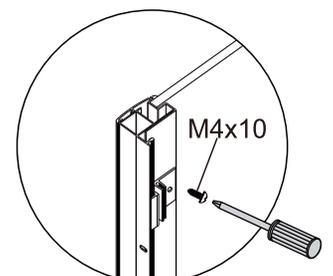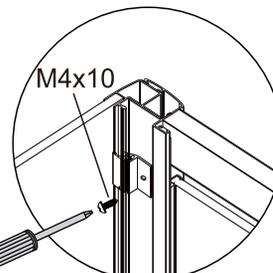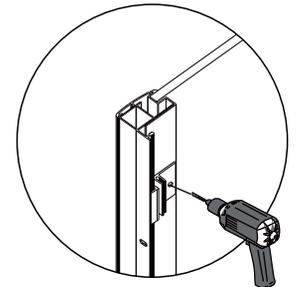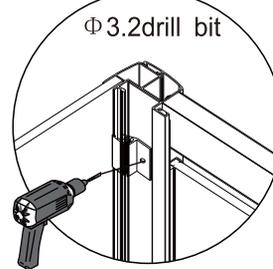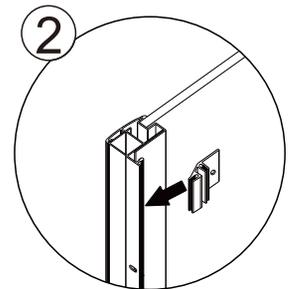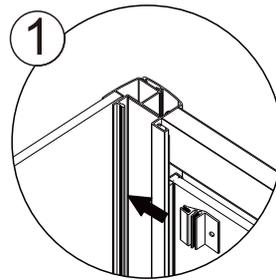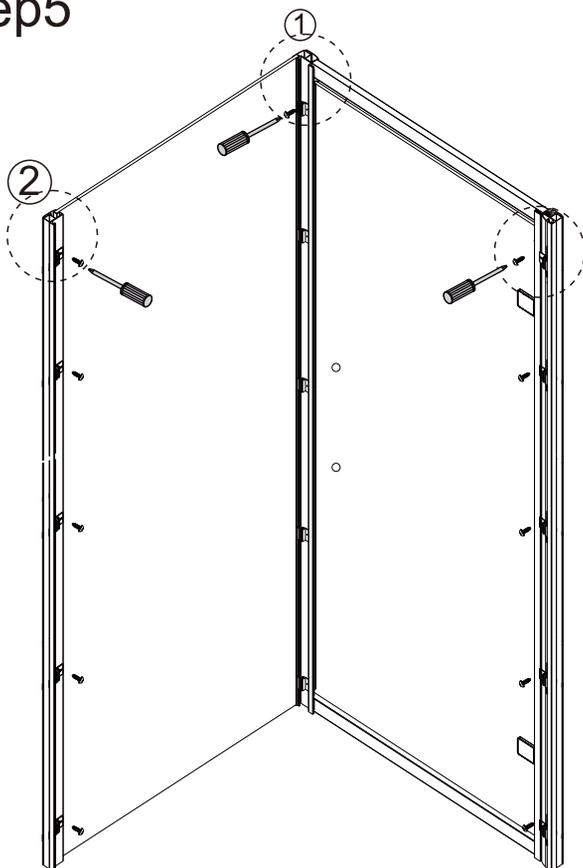


## Step6

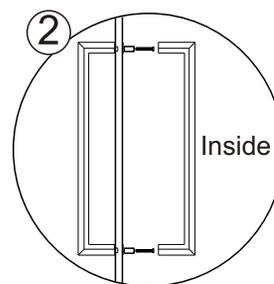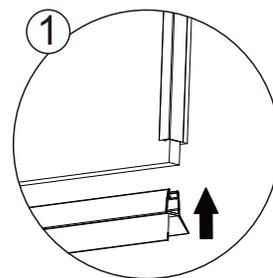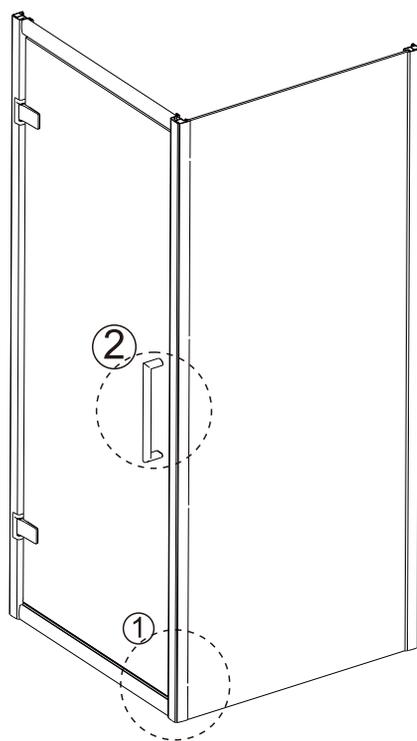



## Step7

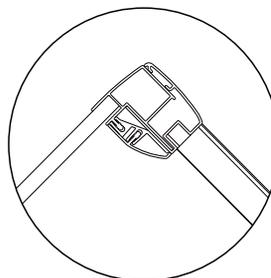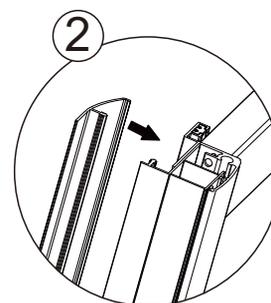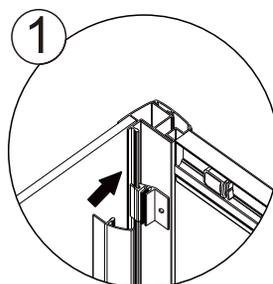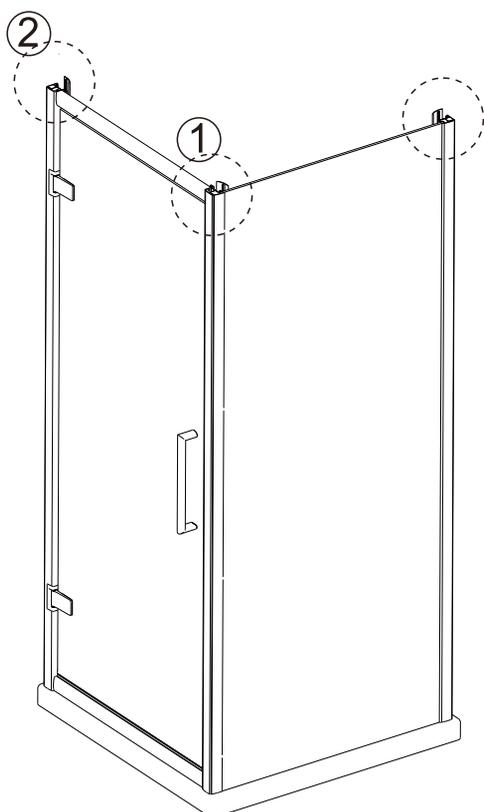

## Step 8

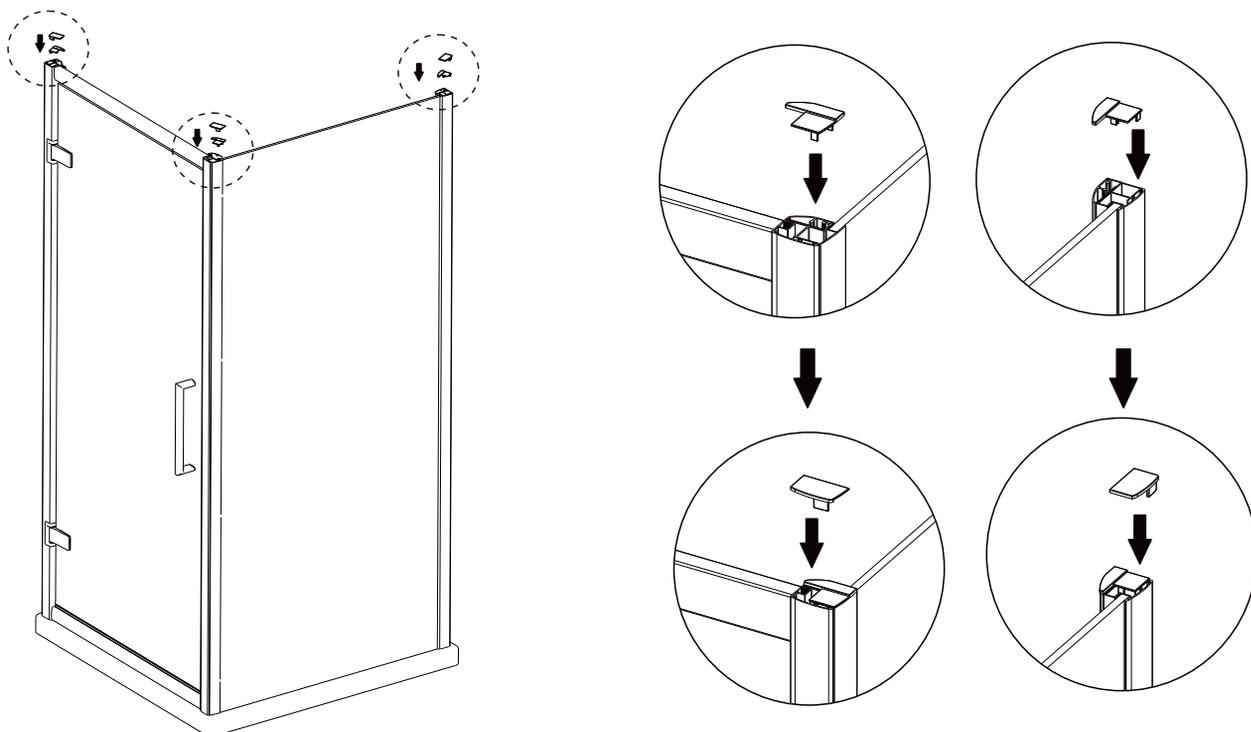

## Step 9

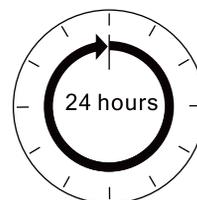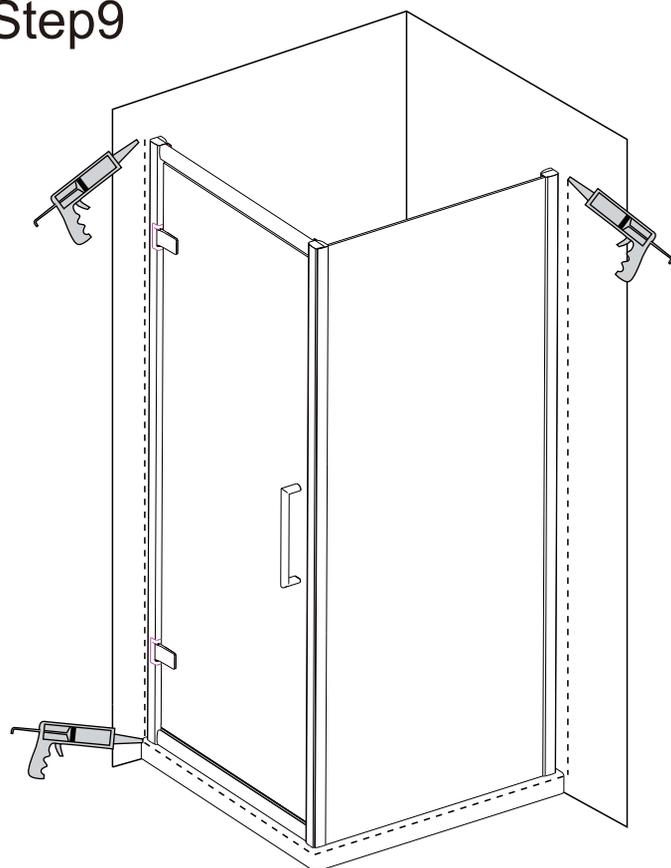

**Allow 24 hours for silicone to dry before use.**

**Silicone on the outside edge only**